



ENTER PROGRAM MODE:

PRESS "DISPLAY" BUTTON AND HOLD FOR 20 SECONDS
(all lights will flash red)

EXIT PROGRAM MODE:

PRESS "DISPLAY" THEN PRESS "RESET"
(all lights will flash 4 times)

ACTIVATE OUTPUT 1:

PRESS AND HOLD "RESET" THEN PRESS "DUMP 1"
(CH6 will turn green)

ACTIVATE OUTPUT 2:

PRESS AND HOLD "RESET: THEN PRESS "DUMP 2"
(CH 7 will turn green)

ACTIVATE LIGHT ON:

PRESS AND HOLD "RESET" THEN PRESS "LIGHT ON"
(Ch7 will turn green)

DEACTIVATE OUTPUT 1:

PRESS AND HOLD "SHUT DOWN" THEN PRESS "DUMP 1"
(CH6 will turn red)

DEACTIVATE OUTPUT 2:

PRESS AND HOLD "SHUT DOWN" THEN PRESS "DUMP 2"
(CH6 will turn red)

DEACTIVATE LIGHT ON

PRESS AND HOLD "SHUTDOWN" THEN PRESS "LIGHT ON"
(CH7 will turn red)

SET OUTPUT 1 TIME DELAY:

PRESS AND HOLD "DUMP 1" THEN PRESS AND HOLD "SHUT DOWN"
CONTINUE TO HOLD BOTH OF THESE DOWN FOR THE DESIRED TIME REQUIRED, THEN LET
GO OF BOTH BUTTONS. (CH 6 will flash orange while buttons are pushed)

SET OUTPUT 2 TIME DELAY:

PRESS AND HOLD "DUMP 2" THEN PRESS AND HOLD "SHUTDOWN".
CONTINUE TO HOLD BOTH OF THESE DOWN FOR THE DESIRED TIME REQUIRED, THEN LET
GO OF BOTH BUTTONS. (CH7 will flash orange while buttons are pushed)

SET LIGHT ON TIME DELAY:

PRESS AND HOLD "LIGHT ON" THEN PRESS AND HOLD "SHUTDOWN"
CONTINUE TO HOLD BOTH OF THESE DOWN FOR THE DESIRED TIME REQUIRED, THEN LET
GO OF BOTH BUTTONS. (CH7 will flash orange while buttons are pushed)

****TO SAVE AND ENABLE PROGRAMMING CHANGES, EXIT THE PROGRAM MODE BY
PRESSING "DISPLAY" THEN "RESET" ****